

SAFETY AND PRECAUTION RECOMMENDATIONS

Safety precautions

BARIX devices are designed with the highest concern for safety. However, any electrical device, if used improperly, has the potential for causing fire, electrical shock, property damage or personal injury. To help ensure accident-free operation, follow these guidelines:

- Observe all warnings, precautions and instructions.
- Regularly inspect the AC power adapter for damage.
- Stop use, unplug the AC power adapter from the electrical outlet and disconnect any other cables immediately, if your BARIX device or accessories (e.g., remote, power adapter) have been damaged, cracked or punctured, or if it functions in an abnormal manner, produces unusual sounds or smells or becomes too hot to touch.
- To prevent fire or shock hazard, do not expose your BARIX device to rain, moisture, or direct sunlight.
- Read all instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry soft cloth.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- Protect the power cable from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.

BARIX

- Refer all servicing to BARIX qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cable or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- The Mains plug should be readily available to disconnect the equipment.
- Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- Do not expose apparatus to dripping or splashing and do not place objects filled with liquids, such as vases, on the apparatus.
- Caution: To avoid damage to speakers, turn off the external amplifier before unplugging your BARIX device.

Use and handling

- BARIX devices are for professional use, keep them (and especially remote controls and cables) out of reach of children under the age of six.
- Permanent hearing loss may occur if your BARIX player or headphones are used at high volume. To prevent possible hearing loss, limit the amount of time you use your BARIX player or any headphones at high volume.
- Warning: Do not open BARIX devices as there is a risk of electric shock.
- The product packaging may include plastic bags, cable ties and fasteners. Dispose of these properly and keep them out of reach of children, as they could present a choking hazard.
- Do not touch your BARIX device or connected cables during an electrical storm.
- Do not allow liquid, small particles or other foreign objects to get into your BARIX device or accessories.
- Do not expose your BARIX device or accessories to liquid, smoke or steam.
- Do not expose your BARIX device or accessories to high temperatures, high humidity or direct sunlight.
- Do not place your BARIX device on the floor or in a place where it may cause someone to trip or stumble.
- Do not stack BARIX devices without mounted rubber feeds; it may cause your BARIX device to overheat.
- Do not drop, crush or disassemble your BARIX device.
- Do not attempt to repair your BARIX device yourself. Disassembling your BARIX device may cause damage and voids the warranty.
- Caution: To avoid damage to speakers, turn off the external amplifier before unplugging your BARIX device.

BARIX

Important tips about battery handling

- Some of the BARIX devices come with a Barix remote control. Use standard AAA or AA batteries (dependent on remote device) for these.
- Replace all batteries at the same time
- Do not use damaged, deformed or leaking batteries
- Some BARIX devices contain a cell battery as backup power for the integrated real time clock (RTC) contact your certified BARIX partner to discuss how to exchange this battery if needed.

Battery leaks

- If a battery leak occurs, handle items with rubber gloves and protective eye wear to reduce chance of contact. If skin or eye contact does occur, flush immediately with clean water and seek medical assistance.

Warm or hot to touch

If the back of your BARIX remote gets warm or hot during normal use, follow these steps:

- Discontinue the use of your remote
- Place remote on hard surface and let cool. Do not attempt to remove batteries while hot!
- Contact support@barix.com

Disposal

- Always dispose of batteries following federal guidelines or local ordinances. **Never** dispose of used batteries in open fire.