



**ANNUNCIOM**

**155**

## **Quick Install Guide Version 1.1**

### **Rugged IP Paging, Intercom and VoIP device**

#### **Package contents**

- a Annunicom 155
- b Quick Install Guide

#### **Recommended Accessory Kit contents (not included in this package)**

- c Ethernet Cable 3 m (M12 "D" male / RJ45 male)
- d Power supply (M12 "A" female)
- e\* Audio + I/O plug (Shielded D-sub 15 pin male)
- f\* RS-485 plug (M12 "A" female)

\* Intended for application-specific cabling


#### **Support**

For support please contact your local dealer or visit [www.barix.com](http://www.barix.com).

© Barix AG 8/2010, all rights reserved. All information is subject to change without notice. All mentioned trademarks belong to their respective owners and are used for reference only. Barix, Annunicom and SonicIP are trademarks of Barix AG, Switzerland, and are registered in certain countries.



### Front view

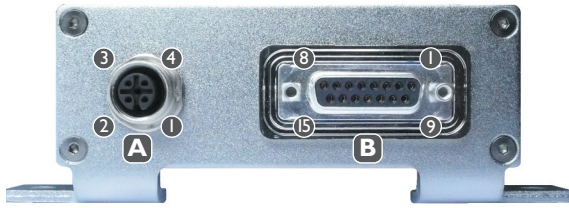

#### A RS-485 bus (M12 "A" female)

Pin	Description
1	V+ 12V, 100mA max.
2	Ground
3	485 A (not inverted)
4	485 B (inverted)

The DC power output on Pin 1 has a self-resetting fuse rated 100mA.

#### B Analog & I/O (DSub 15 pin female)

Pin	Description
1	Line Out- [Cold]
2	Line Out+ [Hot]
3	Ground
4	Input 0
5	Input 1
6	LED Out+
7	Not connected
8	Microphone + [Hot]
9	Speaker - [Cold]
10	Speaker + [Hot]
11	Ground
12	Ground
13	Ground
14	Not connected
15	Microphone - [Cold]

### Rear view



#### C Ethernet switch port 2 (M12 "D" female)

Pin	Description
1	TX +
2	RX +
3	TX -
4	RX -

#### D Ethernet switch port 1 (M12 "D" female)

Pin	Description
1	TX +
2	RX +
3	TX -
4	RX -

#### E Power Input (M12 "A" male)

Pin	Description
1	Vin+ 24..48VDC
2	Not connected
3	Vin -
4	Not connected

### Top view



#### F Green and red LEDs for device status display

#### G Green LED for Link and yellow LED for Activity status display of Ethernet switch port 1

#### H Green LED for Link and yellow LED for Activity status display of Ethernet switch port 2

# I Installation

## STEP 1

Either use a network cable (c) to link the Annunicom (port C or D) to the PC directly, or connect the Annunicom to the PC via your network switch.

## STEP 2

i) If you are ready to connect to audio equipment: Wire the corresponding pins of the “Audio + I/O” plug (e) to a speaker or the Line Out to the input of your mixing console or monitoring device in order to hear the announcement in Step 4i) and plug it into the “Audio + I/O” connector (B).

ii) If you are not yet ready to connect the device in to your audio equipment, you can still configure the Annunicom. Either download the “Barix Discovery Tool” from [www.barix.com](http://www.barix.com) for use in Step 4ii) or continue from section 3 on the last page.

## STEP 3

Connect the Power supply (d) to the device’s power input (E) and then to an appropriate electrical outlet.

## STEP 4

- i) The Annunicom will now acquire an IP address and announce it over the audio outputs (if no DHCP server is available this can take up to 5 minutes).
- ii) If you did not connect audio, launch the “Barix Discovery Tool” and click the “Get” button to find out which IP address the device has obtained (see picture at the bottom of the page). Make sure that the Ethernet/MAC address matches your device (see label below the Ethernet connectors (C, D) on the rear plate of the device).

Now that you know the IP address proceed to section “2 Network configuration by web browser”.

If you were not able to obtain the device’s current IP address with the previous steps see section “4 Troubleshooting”.

# 2 Network configuration by web browser


If you need to use static (fixed) network settings follow the steps 1 to 3 otherwise continue at step 4.

## STEP 1

Open your web browser.

## STEP 2

Enter the IP address that was announced by the Annunicom and press Enter. Example: 192.168.0.12  
Click the “SETTINGS” button on the left to see the following page:

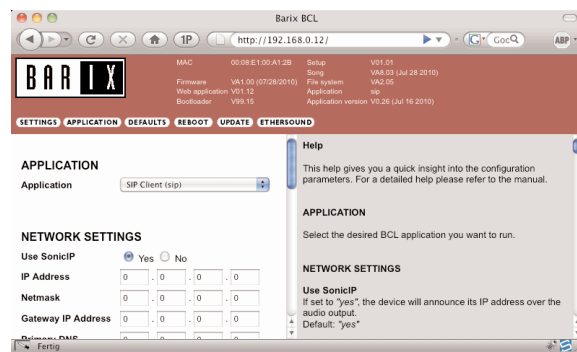

## STEP 3

Enter the static IP address into the IP address field. The default is “0.0.0.0” for automatic discovery (DHCP).


If you know the values for the other fields enter them, otherwise leave them at default (“0.0.0.0”).

Hit the “Apply” button to save all changes. The device will reboot with the configured IP address.

## STEP 4

Download the user manual from [www.barix.com](http://www.barix.com) and use it to complete the installation.

For information about our products, manuals, technical documentation, latest firmware, support and access to the user forum please visit [www.barix.com](http://www.barix.com).

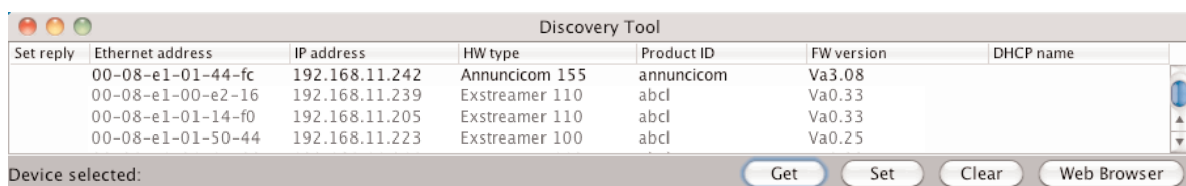

### 3 Setting temporary IP address using the MAC address

This procedure will work only in a local network. After this procedure the temporary IP will be active only until restart/reboot. After a restart the procedure has to be repeated.

#### STEP 1

Either use a network cable to link the Annunicom and the PC directly, or connect the Annunicom to the PC via your network switch and power the device. Make sure that you have a valid static IP address configured on your PC (e.g. 192.168.0.2)

#### STEP 2

Windows : For a command window. click on "Start", click on "Run..", in the "Open" field type **cmd** , click on "OK".  
OSX / Linux : Open a terminal window.

#### STEP 3

Please proceed to step 4 if you linked the PC directly to the device in step 1.

To ensure that you use a free IP address (not already used by another device in the network) please use the Ping command. To verify availability in this example we assume the PC to have the IP address "192.168.0.2" and want to check if "192.168.0.6" is free.

Type **ping 192.168.0.6** and hit the "Enter" key. You should get no reply which gives you reasonable assertion that the "pinged" IP is available.

#### STEP 4

Look for the Annunicom's MAC address printed on a label placed below the Ethernet ports (12 hex digits, separated by a hyphen every 2 digits).

Type into the windows command window

```
arp -s 192.168.0.6 00-08-E1-00-B1-77
```

or on a OSX or Linux system type into the terminal

```
arp -s 192.168.0.6 00:08:E1:00:B1:77
```

and hit the "Enter" key (replace the digits according to your devices MAC address). You must have administrative rights to be able to do so (sudo on OSX / Linux).

#### STEP 5

Now we have to make the Annunicom listen to the IP address "192.168.0.6" using the Telnet command.

To do so type into the command window

```
telnet 192.168.0.6 1 and hit the "Enter" key (the number "one" must be there for this command to work correctly !!!). The Annunicom will immediately
```

refuse the connection on port 1, but will be available for browser access as long as the device stays powered.

#### STEP 6

To check if the Annunicom is responding you can use the ping command again. To do so type

```
ping 192.168.0.6 and hit the "Enter" key.
```

If you do get a reply the IP address 192.168.0.6 can be used to access the Annunicom using a web browser. Please go back to section "2 Network configuration by web browser" to configure a static IP address.

If you do get "request timed out" then please repeat step 5 carefully (you most likely mistyped the telnet command) or repeat the entire procedure.

If the ARP method does not work for you, refer to the user manual for further methods.

## 4 Troubleshooting

- If the status LEDs (F) stay dark check the power cabling (installation step 3).
- Check if the green LINK LED (G or H) is lit, if it is not then check your cabling (network port C or D).

Note: Acquiring an IP address can take up to 5 minutes.

For information about our products, manuals, technical documentation, latest firmware, support and access to the user forum please visit [www.barix.com](http://www.barix.com).

Barix AG  
Seefeldstrasse 303  
8008 Zürich  
SWITZERLAND